

SYXmoto

OWNERS MANUAL



PAD50-1Z

50cc 2-Stroke Dirt Bike Competition only



[support center](#)



Scan the QR code for
quick start guide



[syxmoto.official](#)

Distributed by IceBear Powersports
Address: 10580 mulberry ave. Fontana CA 92337

WWW.SYXMOTO.COM

*Please note that this is a generic manual.

The model of the vehicle you have may slightly differ from the
pictures shown in this manual.

Instructions

Please read this owner's manual carefully before using this product!
This is very important!

It's required for driver's safety and vehicle's maintenance!

*** Always ride under adult supervision! This is most important! It's very important for your safety. This product is recommended for riders 12 years old and older. Do not lend the vehicle to others who don't know how to operate.**

*** Please observe all local law and regulations.**

*** If you do not use the vehicle for more than 2 weeks, be sure to turn off the fuel tank switch and drain the residual gasoline in the carburetor and Fuel tank. To avoid deterioration and damage to the vehicle.**

Contents

Safety warning	2
Assembling	3
Emergency kill switch and speed limiter	4
Tire pressure gauges	5
Operating / Inspection before riding.....	5
Idling (inspection).....	5
Front, rear suspension (inspection)	6
Front brake system (inspection).....	6
Rear brake system (inspection)	6
Tool bag (inspection)	6
Self-Protection (inspection).....	6
Starting	7
Training	7
Riding	7
Parking	7
Cleaning	7
Storage	8
Transport	8
Delivery	8
Maintenance&accessories	8
Maintenance list, age warning and warning labels.....	9
Accessory description, spec data, circuit diagram.....	10-11

Safety warning

1. This vehicle is not a toy.
2. Children must be trained before operating this vehicle.
3. Be sure of children's riding capability.
4. Children must understand the manual and the importance of warnings in the manual.
5. User must read the owner's manual carefully and understand the content of the manual.
6. Incorrect operation of this off road two-wheel vehicle can result in serious injury or even death.
7. This product is not intended for ON-ROAD use.
8. Never ride with more than one person.
9. Never attempt to operate this vehicle while under the influence of alcohol or drugs to avoid injury or death.
10. Please control the speed, do not drive at excessive speeds.
11. Do not allow the vehicle to be used while being serviced.
12. Inspect the vehicle's condition before operating.
13. Do not modify the vehicle or change the parts. This is can be unsafe.
14. Before riding, please wear proper safety gear.
15. It is necessary to receive training from your retailer to learn the operation of the vehicle.
16. Know your local laws and regulations regarding off road two-wheel vehicles prior to riding. This may be obtained from your retailer.
17. After using the vehicle for long periods of time the muffler will become very hot and can burn you if not careful.
18. Although the vehicle is designed with safety measures, Injury can still arise.

Please read the warning labels on the vehicle carefully, and understand them fully.

1. Warning/caution label includes important safety information.
2. User must understand the content of labels completely.
3. Make sure all labels are put on the vehicles at time of assembly.
4. If the labels are not clear or fall off, please ask your retailer for replacements to ensure the integrity of all the labels.

Assembling guide

1. Place the packing box on the flat ground, then open it.(with the scissors or cutter

2. Use 10# open-end wrench and 6# Allen wrench to take apart the packing metal for non- iron cage packed models, this step is not applicable.


1st step: Please install the rear shock absorber, and tighten nuts on both sides with 25N.m force. Use blue loctite

2nd step: Please install the front wheel (make sure the tread pattern and air valve are pointed the correct direction), Grease the axle, bearings and seals then tighten the nuts with force between 35N.m ~ 45N.m.

3rd step: Please install the handlebar (adjust to proper angle), and tighten the nuts with force between 15N.m ~ 25N.m.


If you fail to understand the instructions, please contact your local retailer and get proper guidance.

Adjust the Chain: Use your index finger. Press lightly in the middle position between power output sprocket and rear sprocket. The ideal adjustment should be 15mm to 20mm when pressed. If it is not in this range, please adjust the chain adjuster. (Please note: The chain adjusters should be adjusted at the same time to ensure wheel, chain, and sprocket alignment). Loosen the axle nut Then loosen or tighten the axle adjuster nuts to the desired position. Finally, tighten the nuts of chain adjuster.

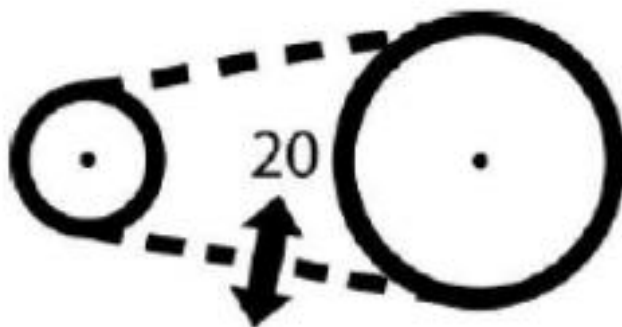

Emergency kill switch

The switch is located on the left side of the handlebar. Pull or press down on the switch and the engine will be stopped.

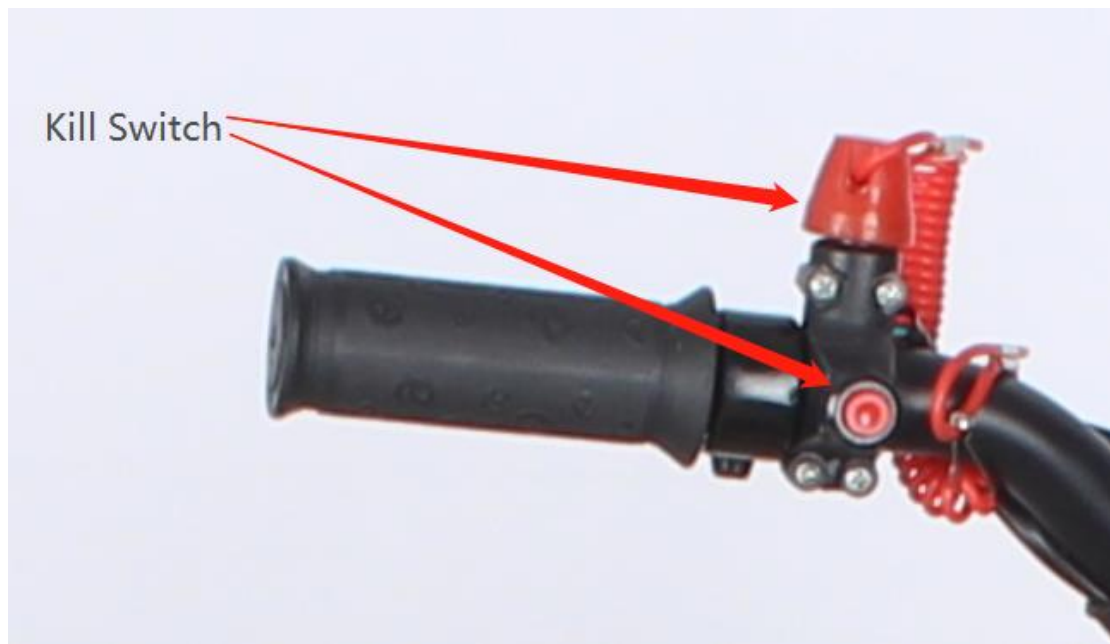

The emergency rope can be fastened to the rider in case there is an emergency. The vehicle will stop automatically when the rider pulls the rope.



The throttle limiter is located on the right side of the handlebar, speed limiter can be adjusted to Two-thirds of the normal speed.

Tire gauge

The proper tire pressure can provide the maximum stability and performance.

Check and adjust the tire pressure regularly, to make sure the pressure is correct.

To find the tire size and standard pressure, please check specification listed on the vehicle warning label . To find the “Load-bearing” and “speed grade”, please check the tire surface.

1. Check tire pressure and condition before riding. Please replace the tire if there are any of the following conditions: broken, stabbing, or rim is out of shape. **(Please seek assistance from qualified technician or local retailer for replacement.**

2. Improper tire pressure will result in hazards. Over the standard pressure can cause a flat tire.

Lower than the standard pressure can cause sidewall failure, loss of tire bead, or pinched tires resulting in flat tire or loss control of the vehicle.

3. When the tire-tread wear is over 2mm, please replace with a new tire. **(Please seek assistance from qualified technician or local retailer for replacement.)**

Operating

Inspection before riding

Idling inspection

1. Stabilize the vehicle, and make sure it moves normally and without interference.

2. Check whether the rear shock absorber is deformed or leaking.

3. Hold the vehicle when checking.

4. Repair and replace parts when worn or broken.

5. Contact your local retailer if you are unable to resolve any issues.

Front brake inspection

Check the front brakes .

1. Front brake handle is mounted on the right side of the handlebars pull the lever making sure the brake is engaging and firm.
2. Check that tire rotation is good after releasing the brake lever.
3. Contact the retailer if brake maintenance is needed.

Rear brake inspection

Check whether the rear brakes

1. The rear brake is mounted on the left side of the handlebars pull the lever making sure the brake is engaging and firm .
2. Release the brake lever or foot brake lever quickly and check if the tire rotation is good when the pressure is released.

Brake Maintenance

1. Contact the retailer if brake maintenance is needed.
2. Inspect the brake shoes/ pads regularly, and replace when worn.

Tool bag inspection

Check whether tool bag is taken every time before riding.

The tool bag is equipped with basic tools. You can use them when needed.

Self-protection inspection

Self-protection inspection is to help ensure a safe and fun riding experience. Please wear the proper protective clothing to ensure your safety.

Protective clothing consists of these parts below:



Every check and inspection step above is necessary. Danger exists when riding. Please conform to the above process before riding and operating

this vehicle. The warning label on the surface of the vehicle includes important safety information. User must fully understand. This vehicle may cause extreme injury and could even lead to death if the above mentioned procedure is not followed.

Starting

Following the steps below to start the engine:

1. Park the vehicle on the flat surface.
2. While holding the handlebar and front brake with one hand pull steadily and even on the pull start with the other.
3. If the engine doesn't start, please open the choke valve first. Try again. Close the choke valve, when the engine warms and starts to idle steadily.
4. Let warm up before riding. Slowly open throttle after initial startup.

Training

If you don't understand the information, please contact your local retailer to learn from a local professional institution or the retailer.

How you operate the vehicle in the first 2 weeks may affect the vehicle future performance and life expectancy of the engine.

During this period, do not run the vehicle at full throttle.

After breakin period, maintain the vehicle according to maintenance. Keep the vehicle in good condition.

Training is necessary. Improper operation will result in damage to the vehicle and can result in serious injuries and death.

If the rider has no safety awareness or riding experience, please operate the vehicle under the supervision of an adult.

Riding

Before operating, please review the safety operating information.

1. Pay attention to the brakes working condition at all times.
2. Riding with only one hand is dangerous and forbidden.
3. Turn the throttle slowly. Never turn it suddenly.
4. Release the throttle and use the brake, to make it slow down.
5. Make sure to use both the front brake and the rear brake work at the same time when braking.
6. Do not make dangerous movements while riding to ensure safety.

Cleaning

After every ride, the rider should clean the vehicle. Always place the vehicle on flat surface to clean, and then check.

1. High pressure air or water will harm the vehicle.
2. Chain should be always lubed with chain lubricant.

Storage

The performance will be reduced if you do not use vehicle for a long time and properly prepare the vehicle.

Before storage, vehicle must be checked to ensure it is in a good condition.

1. Clean the vehicle,
2. Clean the chain, and then lubricate it.
3. Lubricate all the cable parts.
4. Drain fuel from carburetor, fuel tank, and turn off fuel valve.
5. Place the vehicle well-packed in a cool ventilated place to avoid damp and sun exposure.

Transport

Transporting the vehicle

1. Ensure the vehicle is well protected.
2. Ensure the vehicle is secured properly.
3. Handle with care.

Delivery

Delivery of the vehicle

1. Ensure the vehicle is placed properly. Do not turn it upside down or lay it on its side.
2. Ensure the vehicle is secured properly.
3. Handling with care.

Maintenance

If you do not understand the information please contact local retailer.

Necessary maintenance is the important to keep the vehicle in good condition. Please maintain the vehicle according to list.

Engine maintenance: After Each use, turn off the fuel valve and drain any remaining fuel from carburetor float bowl. This is very important. If not done accordingly, the vehicle will not start when taken out of storage, carburetor may clog or leak.

Maintenance list (Please operate according to maintenance list)

I: Inspection, Maintenance or lubricant replacement C: Cleaning

L: Add lubricant

	First week	30 days after driving	Each year
Fuel System	I		
Throttle		I	
Air filter	After every ride	After every ride	After every ride
Spark plug		I	
carburetor	I	I&C	
chain	I&L	I&L	
Brake pads			
Brake system	I	I	I
Nuts and bolts	I	I	
Tire	I	I	I
Steering system			I
Suspension system		I	I
Battery(if available)		I	



Accessory description/Spec data/Circuit diagram




PRODUCT NAME	BLITZ	PRODUCT MODEL	PAD50-1Z
LENGTH X WIDTH X HEIGHT(m m)	1260×555×7 70	ENGINE MODEL	1E44F-6
AXLE BASE(mm)	/	BORE×STROKES	44.02×33.20
WHEEL BASE(mm)	880	DISPLACEMENT(m l)	50.53
MIN GROUND CLEARANCE(mm)	280	COMPRESSION RAT E	8:1
TURNING CIRCLE DIAMENTER(m m)	2900	IDLE SPEED(r/min)	2800±150
DRY WEIGHT(kg)	26	RATED POWER HP (r/min)	2.52/7000
WETWEIGHT(kg)	30	MAXIMUM TORQU E N.m(r/min)	2.2/550
RATED LOAD QUALITY(kg)	≤50	CARBURETOR TYPE	H117A FLOAT (PLUNGER)
MAXIMUM SPEED(Km/h)	40	CLUTCH TYPE	AUTOMATIC CENTRIFUGAL
FUEL TANK CAPACITY(L)	2	SPARK PLUG TYPE	BM6A
FRONT/REAR BRAKE SHOCK ABSORBER TYPE	SPRING	MUFFLER TYPE	IMPEDANCE COMPOUND MUFFLER
FRONT/REAR BRAKE TYPE	DISC BRAKE	STARTING MODE	PULL START

FRONT/REAR BRAKE OPERATION MODE	AND BRAKE LEVERS/CAB LE	IGNITION MODE	NONE-TOUCH MAGNETIC CONTROL
------------------------------------	-------------------------------	---------------	-----------------------------------

FRONT/REAR TIRE SPECIFICATION	2.50-10	DRIVE MODE	CHAIN DRIVE
----------------------------------	---------	------------	-------------

FRONT/REAR TIRE PRESSURE	248	LUBRICATION MO DE	25:1 91 OCT:2STROKE OIL MIX
FRONT/REAR RIM TYPE	ALLOY RIM	COOLING MODE	AIR-COOLED
HEADLIGHT SPECIFICATI ON	N/A	FUEL GRADE	91#
PRIMARY REDOUCTION RATIO	3.20	MIXTURE RATIO OF FUEL&LUBRICA NT OIL	25:1
FINAL REDUCTION RATI O	4.91	LWA dB(A)	78
DRIVE RATIO	15.71	VIBRATION(m/s ²)	1.0

CIRCUIT DIAGRAM

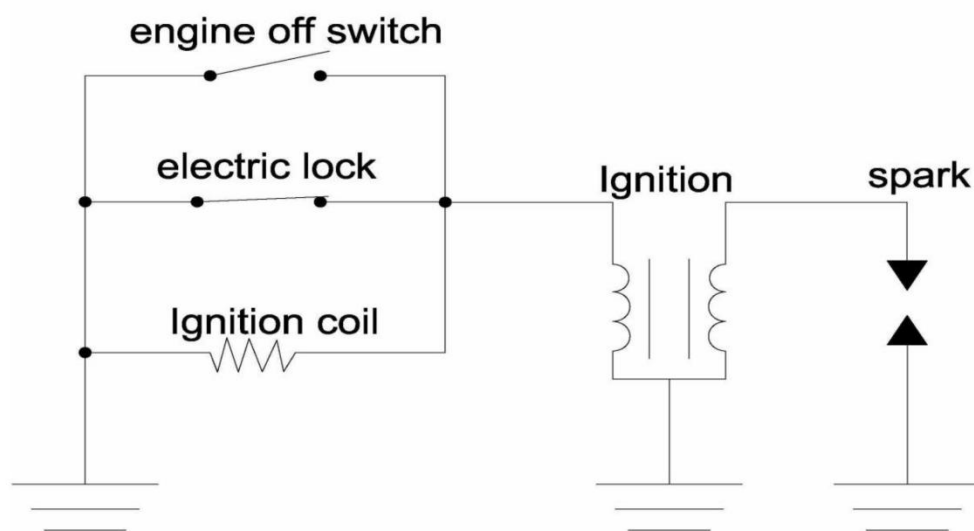

Installation Instruction

1. Open packing box, take out motorcycle and accessories.



2. All parts and tools needed to assemble. Please make sure everything is included




3. Remove the front brake caliper; prepare install front wheel.



4. Install the front wheel, put the spacers on each side then tighten the axle nut.



5. Install the front brake caliper. Use loctite on mounting bolts.

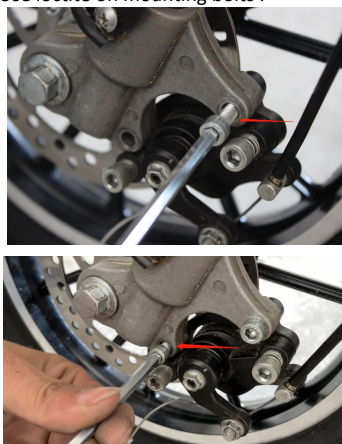


6. Install the handle-bar and rear shock.




7. Install the front fender.



8. Install the front number plate.

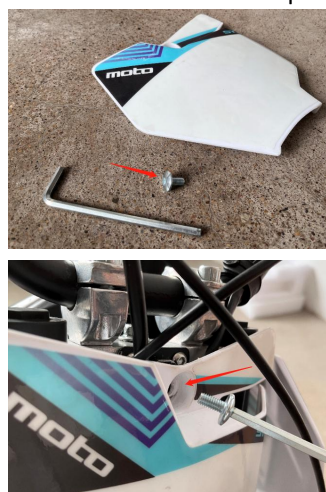

9. Install the handle-bar pad. Start enjoy your riding!

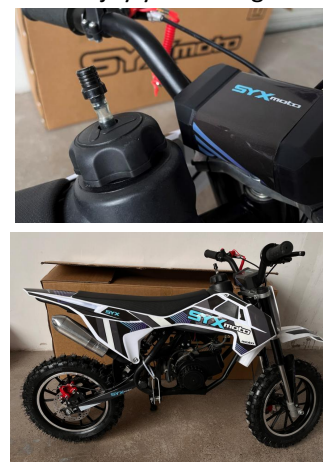

Search SYX MOTO on Youtube and Facebook for video instructions.