

PAD125-1F Assembly Guide

1. Bike shipped in a steel frame inside of a box.



2. Remove everything from the package.



3. Rear shock absorber assembly



4. Left side of front wheel – short spacer



5. Right side of front wheel – long spacer



6. Front brake and oil bump



7. Handlebar risers and bolts




8. Front fender



9. Number plate



10. Foot pegs

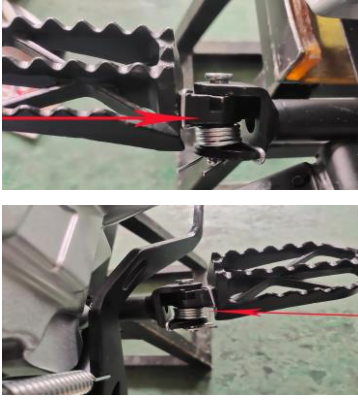

11. Handlebar protection padding
and gas cap vent hose



12. Done!



www.syxmoto.com

<http://www.facebook.com/syxmotousa>

<http://www.youtube.com/syxmoto2018>

