

PAD125-3 Assembly Guide

1. Bike shipped in a steel frame inside of a box.




2. Remove everything from the package.



3. Front and rear shock absorber assembly




A long bolt, 55mm

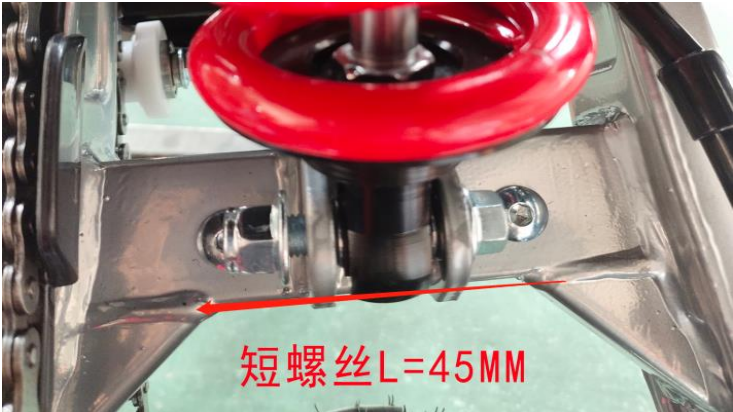


A short bolt, 45mm

4. Front shock absorber and triple clamp

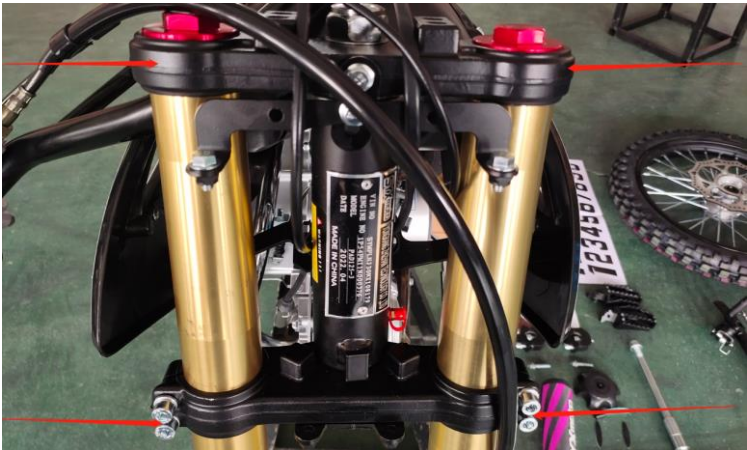


5. Handlebar risers and bolts

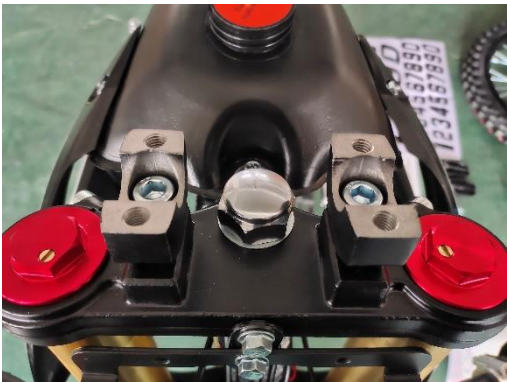


6. Front fender



7. Front panel

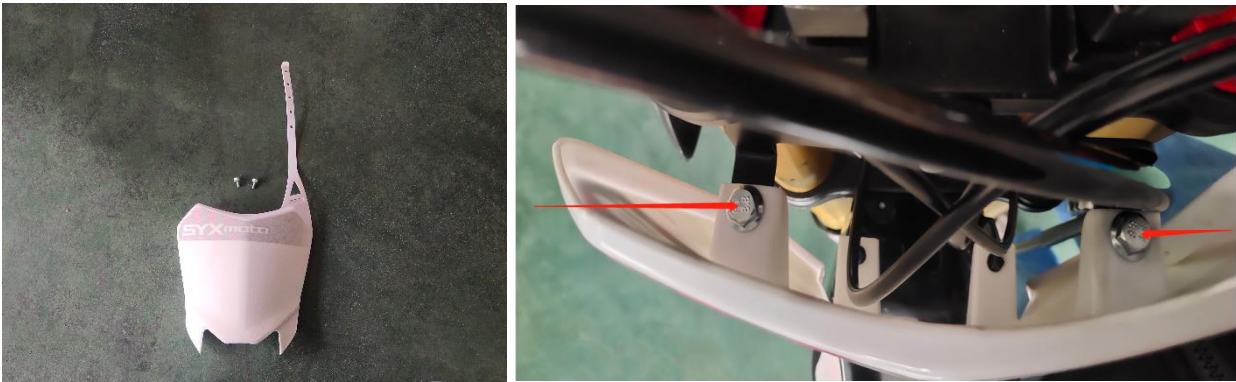


8. Left side of front wheel – short spacer

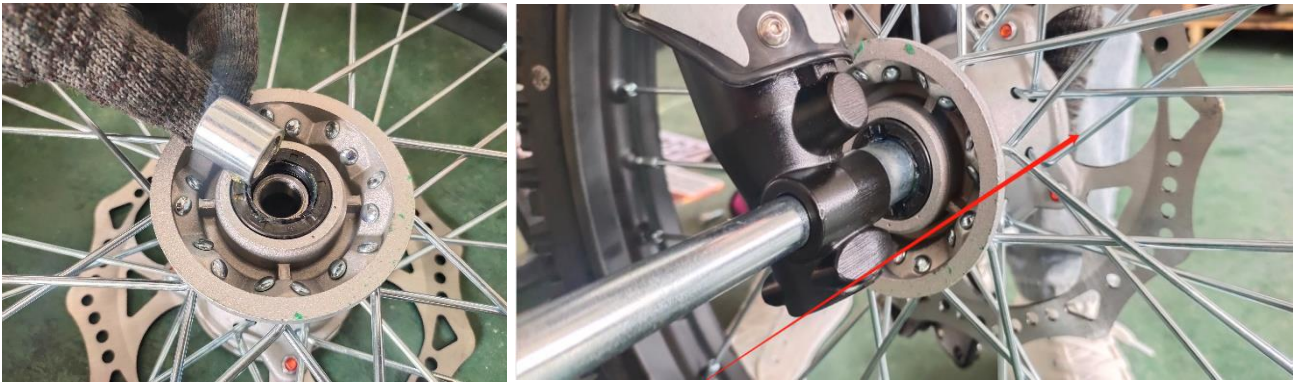

9. Right side of front wheel – Long spacer



10. Front brake

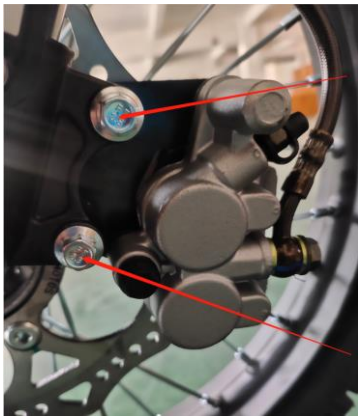

11. Front brake oil line



12. Triangle Stand



13. Foot pegs



14. Handlebar protection padding



15. Gas cap vent hose



16. Done!



<http://www.facebook.com/syxmotousa>

<http://www.youtube.com/syxmoto2018>

